


USE AND CARE GUIDE

PUSH BUTTON COUNTDOWN TIMER

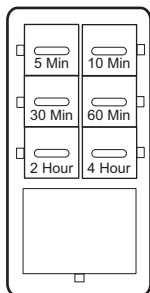

Questions, problems, missing parts? Before returning to the store, call Defiant Customer Service  
8 a.m. - 6 p.m., EST, Monday - Friday  
1-844-871-8796  
HomeDepot.com

THANK YOU

We appreciate the trust and confidence you have placed in Defiant through the purchase of this push button countdown timer. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Defiant!



Installation Instructions

1 Installing the timer

- Turn power off at circuit breaker or fuse box before installation.
- Remove the current wallplate and switch from the wall box.
- Strip the wires to 5/8 in. (16 mm).
- Remove the timer from the packaging and locate the LINE, LOAD, NEUTRAL and GROUND areas on the back of the timer.
- Loosen the LINE and LOAD screws with either a flat-blade or Phillips screwdriver. When loosening screws, stop when you feel resistance.
- Insert the line side wire from the wire box into the hole marked LINE and tighten the LINE screw.
- Insert the load side wire from the wire box into the hole marked LOAD and tighten the LOAD screw.
- Insert the ground wire from the wire box into the hole marked GROUND and tighten the GROUND screw.
- Remove the white jumper wire (BB) from the package. Insert and tighten the jumper wire into the hole marked NEUTRAL.
- Connect the neutral jumper wire (BB) from the timer to the neutral wire in the wire box. Often the neutral wire (white) can be found in the back of the wire box connected with a wire nut. There may be several neutral wires bound together. Add the neutral jumper wire (BB) to all neutral wires bound together and retighten the wire nut, making sure that the wire nut is tight.
- Tug each wire to verify connection, retighten if needed.

**NOTE:** Be sure that all wires and wire nuts are secure.

- Insert the timer into the wall box, being careful not to pinch any wires. Be sure the TOP (indicated on yoke of timer) is facing up. Fasten the timer to the wall box using the screws (AA).
- Place the rocker/decorator wallplate on the timer, being careful to not overtighten wallplate screws.
- Turn the power on at the circuit breaker or fuse box.

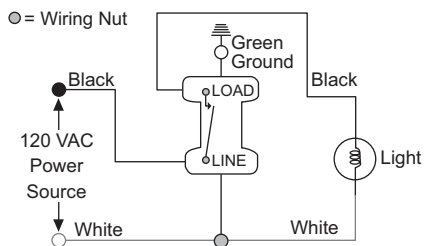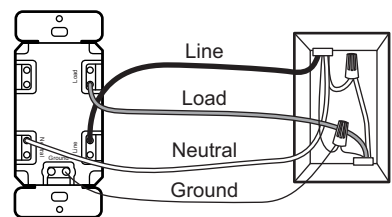

Safety Information

FCC NOTE

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. This Class B digital apparatus complies with Canadian ICES-003. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**WARNING: RISK OF ELECTRIC SHOCK:**

- Shut off the power at the fuse box or circuit breaker before installation
- Do not use in wet locations
- Use indoors only

**WARNING: RISK OF ELECTRIC FIRE:**

- Do not use to control appliances that contain heating elements such as cooking appliances, heaters, and irons
- Do not exceed electrical ratings
- Use only copper wire with this device
- Do not use to control receptacles

RATINGS
120VAC, 60 Hz
1200W Tungsten
1200W Ballast
15A Resistive
1/2 HP

Hardware Included




Operating Instructions

1 Using the timer

- Press the appropriate button on the timing pad (1) for the amount of time you wish the lights or device to be powered on. The blue LED will blink.
- Select a new time, or press the function button (2) to turn the lights or device on for the duration of the last timing pad (1) entry.


**NOTE:** Hold the function button (2) for five seconds to turn the lights or device on indefinitely. Press once more to turn off.

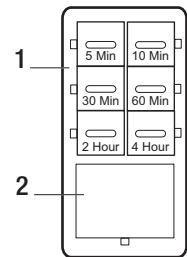

2 LED features

- Press the 5 and 10 minute buttons at the same time and hold for 3 seconds to turn on LEDs all of the time.
- Press and hold again to return LEDs to off all the time.

Product Description

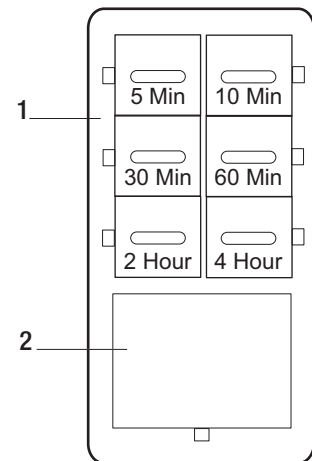

1. Timing pad: Press the appropriate time button to select a time for the lights or device to stay on (5 Min.-4 Hr.).
2. Function button: Press once to turn the lights or device on for the duration of the last timing pad entry. Hold for five seconds to turn the lights or device on indefinitely. Press once more to turn off.

Troubleshooting

Problem	Solution
The timer lights never flash or the timer does not function.	Disconnect the power at the fuse box or circuit breaker, and check the wiring. Try switching the line and load wires connected to the timer screw terminals.
No blue lights come on.	Try pressing the 5 and 10 minute buttons at the same time and hold for 3 seconds.