


## CYGOLITE User Guide

For Metro and Streak models

### Charging the light

Fully charge the battery before using your lighting system.

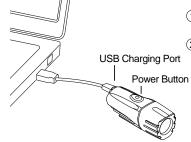


- ① Connect the mini USB charging cable to the USB charging port and a computer/wall adapter.
- 2 The green lit **power button** indicates the charging status.

Flashing Green = Charging Solid Green = Fully Charged

Charging time is 3~5 hours.


Note: Charge times vary by model. See packaging for details.

#### Mounting on the handlebar

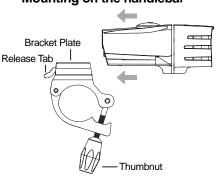

- ① Adjust the **bracket plate** to your preferred side to side swivel angle. Secure with a Phillips screwdriver. Tighten the screw periodically, if needed.
- ② Unscrew the **thumbnut**. Then wrap the mount around the handlebars. Tighten the **thumbnut** until the mount is secured.
- Slide the light into the mount as shown. Make sure that the light clicks into place.
- To remove the light from the mount, press the **release tab** down and slide the light forward.

# Operating the light



#### Turn On/Off

Press the **power button** to turn on.

Press and hold the **power button** to turn off.

Access Walking Mode (Metro only)
From the off position, press and hold the power button for about 2 seconds.

Scrolling Through Light Modes
Press the power button.

WARNING: Opting during right and day is an inherently dangerous activity. Lut can be enjoyed when proper select measures existent measures existent measures existent. Secretary existent existence ex



Cygolite Irvine, California

© 2015 Cygolite. All rights reserved. No part of this user guide may be reproduced, modified, distributed, or stored in any form without prior written permission of the copyright owners. Patent pending